



Optonica	10093, 10165
Orion	10017, 10236, 10463, 10180, 10178, 11463, 10177, 11929
Panasonic	10054, 10000, 10156, 10250, 10051, 10236, 10030, 10018, 10055, 10650, 11291, 11410, 11919, 11941, 11946, 11947
Panda	10706
Paxonic	10060, 10030
PCE	10156, 10060
Penney	10047, 10000, 10156, 10250, 10051, 10060, 10178, 10030, 10018, 10135, 10159, 11347, 11919, 11926
Philco	10054, 10463, 10030, 10145, 10187
Philips	11454, 10054, 10030, 10171, 10187, 10690, 11154, 11254
Pilot	10051, 10060, 10178, 10030
Pioneer	10166, 10055, 10679, 10866, 11260
Polaroid	10765, 10865, 11262, 11276, 11314, 11316, 11326, 11327, 11328, 11341
Portland	10451, 10092
Precision	10236, 10180, 10177, 10185, 10282
Prima	10761, 10783, 10815, 10817, 11933
Princeton	10700, 10717
Prism	10250, 10051, 10055
Proscan	11447, 10047, 10018, 10135, 10466, 11347, 11922
Proton	10178, 10466
Pulsar	10017, 10092
Pulser	10178, 10092
Quartz	10150, 10178
Quasar	10250, 10051, 10055, 10165, 10650, 11919
Rabbit	10047
RadioShack	10047, 10154, 10180, 10150, 10178, 10030, 10165, 11904
RCA	11447, 10047, 10054, 10000, 10051, 10093, 10178, 11958, 11953, 11948, 11922, 11919, 11917, 11547, 11347, 11247, 11147, 11047, 10774, 10679, 10165, 10135, 10090, 10018
Realistic	10047, 10154, 10180, 10150, 10178, 10030, 10165
Rhapsody	10185
Road Authority	10282
Runco	10017, 10060, 10030, 10497, 10603
Sampo	10047, 10030, 11755, 11756

Samsung	10047, 10054, 10017, 10154, 10060, 10812, 10702, 10178, 10030, 11959, 11903, 11312, 11060, 10814, 10766, 10587, 10055
Sanky	10060, 10030
Sansui	10463, 10060, 10030, 10165, 11904, 11929, 11935
Sanyo	10047, 10054, 10154, 10000, 10463, 10171, 10159, 10799, 10893, 11755
Saville	10060
Sceptre	10878
Scotch	10178
Scott	10236, 10180, 10178, 10030, 10177
Sears	10047, 10054, 10017, 10154, 10000, 10156, 10051, 10093, 10060, 10053, 10178, 10030, 10171, 10166, 10055, 10135, 10018, 10159, 10165, 11904, 11926
Sharp	10054, 10093, 10180, 10165, 10386, 10491, 10688, 10689, 10818, 10851, 11393, 11917
Sheng Chia	10093
Shivaki	10178
Siemens	10145
Signature	10047, 10093, 10030, 10165, 10187
Signet	11262
Simpson	10178, 10030, 10187
Singer	10060, 10092
Solar Drape	10000
Sole	10813
Sony	10017, 10154, 11100, 10000, 10150, 10053, 10080, 10632, 10834, 11904, 11925
Soundesign	10180, 10178
Sova	11952
Spectravision	10156, 10178, 10159
Squareview	10171
SR2000	10154, 10171
SSS	10180
Starlite	10236, 10180
Studio Experience	10843
Superscan	10093, 10864, 11944
Supreme	10000
SV2000	10054
SVA	10748, 10587, 10768, 10865, 10870, 10871, 10872
Sylvania	10047, 10054, 10154, 10000, 10051, 10178, 10030, 10171, 10092, 10159, 10187, 11904, 11926, 11931, 11944
Symphonic	10000, 10180, 10178, 10171, 11904, 11944
Syntax	11144, 11240, 11331
Tandy	10093, 10165
Tatung	10000, 10051, 10055, 11756

Teac	10154, 10706, 10159, 10282, 10689
Technics	10054, 10250, 10051, 10055
Technovox	10030
Techview	10847
Techwood	10250, 10051, 10060, 10055
Teknika	10054, 10463, 10180, 10150, 10060, 10178, 10092
Telecolor	10017
Telefunken	10702
Thomas	10047, 10178, 11904
Thomson	11447, 10047
TMK	10236, 10180, 10178, 10177
TNCi	10017
Tocom	10156
Tomashi	10282
Toshiba	10154, 11256, 10156, 10150, 11265, 10060, 11145, 10145, 10166, 11945, 11936, 11935, 11918, 11704, 11656, 11356, 11156, 10845, 10832, 10650
Tosonic	10185
Totevision	10051
Toyomenka	10178
Truetone	10250, 10051, 10055
TVS	10463
Ultra	10092
Universal	10047, 10135
Universum	10177
V	10864, 10885, 11755, 11756
Vector Research	10030
Victor	10053
Vidikron	10054
Vidtech	10178
Viewsonic	10857, 10864, 10885, 11578, 11755
Viking	10060
Vizio	10864, 10885, 11499, 11756, 11758
Wards	10047, 10054, 10017, 10154, 10000, 10051, 10093, 10236, 10178, 10030, 10166, 11156, 10866, 10187, 10165, 10151, 10080, 10018
Waycon	10156
Welton	10178
Westinghouse	10000, 10451, 10885, 10889, 11282
White Westinghouse	10451, 10236, 10463, 10623, 10889
World	10451, 10236, 10463, 10180
XR-1000	10154, 10180, 10171
Yamaha	10030, 10769, 10833, 10839
Yorx	10030
Zenith	10047, 10017, 10000, 10093, 10463, 11265, 10812, 10178, 10030, 11145, 10145, 10171, 10092, 11904, 11929

**Setup Codes for TV/DVD Combination**

**Controlled by the DVD**

Advent	21016
Akai	20695
Apex Digital	20830
Audiovox	21071, 21121, 21122
Axion	21071
Broksonic	20695
Emerson	20675, 21268
ESA	21268
Funai	21268
Go Vision	21071
Hitachi	21247
Insignia	21268
Jensen	21016
Magnavox	21268
Panasonic	21490
Philips	20854, 21260
Prima	21016
RCA	21022
Samsung	20899
Sansui	20695
Sova	21122
Sylvania	20675, 21268
Toshiba	20695

**Controlled by the TV**

Advent	11933
Akai	11935
Apex Digital	11943
Audiovox	11937, 11951, 11952
Axion	11937

Broksonic	11935
Hitachi	11960

Jensen	11933
Panasonic	11941
Prima	11933
RCA	11948, 11958
Samsung	11903
Sansui	11935
Sova	11952

Toshiba	11935
---------	-------

**Setup Codes for TV/VCR Combination**

**Controlled by the TV**

America Action	10180
Audiovox	10180
Broksonic	11929
Citizen	11928
Curtis Mathes	11919
Daewoo	11928
Emerson	10236, 11928, 11929
Funai	11904
GE	11917, 11919, 11922
GoldStar	11926
Harley Davidson	11904
Hitachi	11904
Lloyd's	11904
Magnasonic	11928
Magnavox	11904, 11931
Memorex	11926
Mitsubishi	11917
Orion	11929
Panasonic	11919
Penney	11919, 11926
Quasar	11919
RadioShack	11904
RCA	11917, 11919, 11922
Samsung	11959
Sansui	11904, 11929
Sears	11904, 11926
Sharp	11917
Sony	11904, 11925
Sylvania	11931
Symphonic	11904
Thomas	11904
Toshiba	11918, 11936
Zenith	11904, 11929

**Controlled by the VCR**

Aiwa	20479
America Action	20278
Audiovox	20278
Broksonic	20002, 20479, 21479
Citizen	21278
Colt	20072
Curtis Mathes	21035
Daewoo	21278
Emerson	20002, 20479, 20593, 21278, 21479
Funai	20000
GE	20240, 20807, 21035, 21060
GoldStar	21237
Harley Davidson	20000
Hitachi	20000
LG	21037
Lloyd's	20000
Magnasonic	20593, 21278

Magnavox	20000, 20593, 21781
Magnin	20240
Memorex	20162, 21037, 21162, 21237, 21262

MGA	20240
Mitsubishi	20043, 20807
Optimus	20162, 20593, 21162, 21262, 21262, 20479, 21479
Panasonic	20162, 21035, 21162, 21262
Penney	20240, 21035, 21237
Quasar	20162, 21035, 21162
RadioShack	20000, 21037
RCA	20240, 20807, 21035, 21060
Samsung	21014
Sansui	20000, 20479, 21479
Sanyo	20240
Sears	20000, 21237
Sharp	20807
Sony	20000, 21232
Sylvania	21781
Symphonic	20000, 20593
Thomas	20000
Toshiba	20845, 21145
Zenith	20000, 20479, 21479

**Setup Codes for TV/VCR/DVD Combination**

**Controlled by the DVD**

Akai	20899
Broksonic	20868
Emerson	20821
ESA	20821
Funai	21334
Magnavox	20821
Panasonic	21362, 21462
RCA	21132
Sharp	20630
Superscan	20821
Sylvania	20821
Symphonic	20821
Toshiba	21045

**Controlled by the TV**

Akai	11903
Broksonic	11938
Emerson	11944
ESA	11944
Magnavox	11944
Panasonic	11946, 11947
RCA	11953
Sharp	11917
Sylvania	11944
Symphonic	11944
Toshiba	11945

**Controlled by the VCR**

Sharp	20807
-------	-------

**CARE**

- Keep the remote dry. If it gets wet, wipe it dry immediately.
- Use and store the unit only in normal temperature environments.
- Handle the remote gently and carefully. Don't drop it.
- Wipe the remote with a damp cloth to keep it looking like new.

Modifying or tampering with the internal parts can cause damage and invalidate the warranty. If your remote is not performing as it should, please contact us at: [www.uei.com](http://www.uei.com).

**FCC NOTICE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

M66200B

Additional product support information can be located at:

[WWW.URCSPORT.COM](http://WWW.URCSPORT.COM)